


For the first installation, please read this guide in advance, and configure it step by step as requests. You need to reboot the device once you finish the configuration including changing the network environments, account number, etc. If you need more information, please check our website: [www.flyingvoice.com](http://www.flyingvoice.com) and download the user guide.

## 1 Packaging List

The following items are included in your package. If you find anything missing, please contact your service provider.

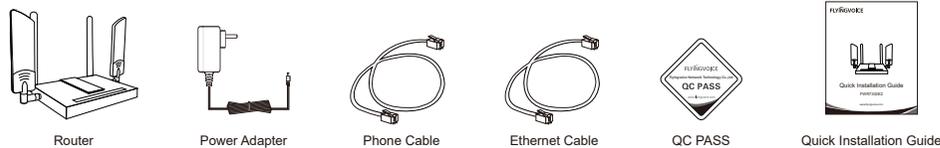


## 2 Connect the Hardware

**Step 1** Insert the power adapter into the DC power jack of the router, make sure it is normally powered on and start the adapter.

**Step 2** Connect the Ethernet cable to the WAN interface on the back of the router, and connect the other end of the Ethernet cable to an available network adapter.

**Step 3** Insert the SIM card into the card slot on the side of the device.

**Step 4** Log in to the router through the LAN port to configure the wireless name and password.

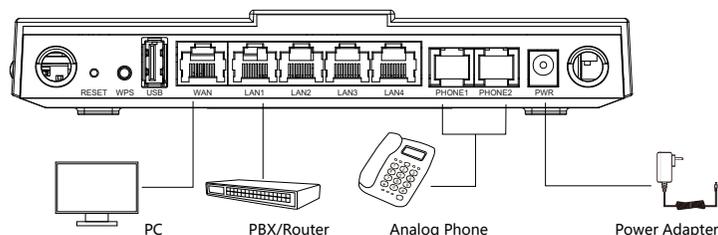

After turning on the router, you can check the following LEDs to confirm the hardware connection.

LED	LED Status	Description	LED	LED Status	Description
Power	ON(GREEN)	Powered on	LAN	ON(GREEN)	Connected (Data)
	OFF	Powered off		On Blinking (GREEN)	Connected (Registered)
SIM	ON(GREEN)	SIM accepted	2.4G	OFF	Disconnected
	OFF	No Service/No SIM card		ON(GREEN)	2.4G ready, no connection
LTE	On Blinking (GREEN)	Connected (Data), running as active WAN	ON(GREEN)	2.4G traffic (Data), has connection	
	ON(GREEN)	Connected (Registered)	OFF	2.4G disable	
	ON(RED)	Has SIM card but connect fail	ON(GREEN)	5G ready, no connection	
	OFF	Disconnected/Power off	On Blinking (GREEN)	5G traffic (Data), has connection	
WAN	ON(GREEN)	Connected (Data), running as active WAN	5G	OFF	5G disable
	On Blinking (GREEN)	Connected (Registered)		ON(GREEN)	Connected (Registered)
	OFF	Disconnected/Power off	PHONE (1-2)	On Blinking (GREEN)	Connected (Data)
				OFF	Disconnected/Register fail

Please Note: If all the LEDs are off, please try to unplug the power adapter and plug it in again. If it's still not working, please contact your service provider.

## 3 Network Configuration

### 3.1 LTE network

The LTE connection is in DHCP mode by default, and the IP can be automatically obtained by plugging in the SIM card. LTE is the second priority network connection, if WAN is not available, router will connect to LTE network.

### 3.2 WAN configuration

**DHCP:** Device gets network configuration through DHCP by default, such as: IP address, subnet mask, gateway and DNS server.

**Static IP:** If the device cannot get the network configuration through DHCP, you need to manually configure the IP address, subnet mask, gateway and DNS server.

**PPPoE:** If the device uses an ADSL modem, it will connect to the network through PPPoE. For information about the user name and password, please contact the network operator.

### 3.3 Login configuration page

Connect your PC to the LAN port of the router, the computer is set to "obtain the IP address automatically". Open web browser on your computer, enter "http://192.168.1.1" in the address field. Then you can login FWR7302E2 configuration page.

administrator/password: admin/admin normal user/password: user/user

## 4 Wireless Configuration

Please refer to the sticker on the bottom of the device for the default wireless name and password.

Use a browser to access <http://192.168.1.1> through the LAN interface, navigate to the wireless 5GHz page to configure wireless name, password and other information.

### Basic Wireless Settings

Wireless Network					
Radio On/Off	<input type="button" value="Radio On"/>				
Wireless Connection Mode	<input type="button" value="Repeater"/>				
Network Mode	<input type="button" value="11vht AC/AN/A"/>				
Multiple SSID	<input type="text" value="FWR7302E2-5G-2853"/>	Enable <input checked="" type="checkbox"/>	Hidden <input type="checkbox"/>	Isolated <input type="checkbox"/>	Max Client <input type="text" value="16"/>
Multiple SSID1	<input type="text"/>	Enable <input type="checkbox"/>	Hidden <input type="checkbox"/>	Isolated <input type="checkbox"/>	Max Client <input type="text" value="16"/>
Multiple SSID2	<input type="text"/>	Enable <input type="checkbox"/>	Hidden <input type="checkbox"/>	Isolated <input type="checkbox"/>	Max Client <input type="text" value="16"/>
Multiple SSID3	<input type="text"/>	Enable <input type="checkbox"/>	Hidden <input type="checkbox"/>	Isolated <input type="checkbox"/>	Max Client <input type="text" value="16"/>

## 5 Registration

Use a browser to access <http://192.168.1.1> through the LAN interface, navigate to the FXS1 > SIP Account page to configure SIP information, such as proxy server, proxy port and account.

### Basic


Basic Setup	
Line Enable	<input type="button" value="Enable"/>
Missed Call Log	<input type="button" value="Enable"/>
Outgoing Call without Registration	<input type="button" value="Disable"/>

Proxy and Registration	
Proxy Server	<input type="text"/>
Proxy Port	<input type="text" value="5060"/>
Outbound Server	<input type="text"/>
Outbound Port	<input type="text" value="5060"/>
Backup Outbound Server	<input type="text"/>
Backup Outbound Port	<input type="text" value="5060"/>
Allow DHCP Option 120 to Override SIP Server	<input type="button" value="Disable"/>
Transport	<input type="button" value="UDP"/>

Subscriber Information	
Display Name	<input type="text"/>
Phone Number	<input type="text"/>
Account	<input type="text"/>
Password	<input type="text"/>

Field Name	Description	Field Name	Description
Line Enable	Enable/Disable the line	Outbound Port	Outbound Proxy's Service port, default is 5060
Peer To Peer	Enable/Disable Peer to Peer, disabled by default	Display Name	The number will be displayed on LCD of phone
Proxy Server	Enable/Disable Peer to Peer, disabled by default	Phone Number	Telephone number provided by SIP Proxy
Outbound Server	IP address or the domain of Outbound Server	Account	SIP account provided by SIP Proxy
Proxy Port	SIP Service port, default is 5060	Password	SIP password provided by SIP Proxy

# FLYINGVOICE

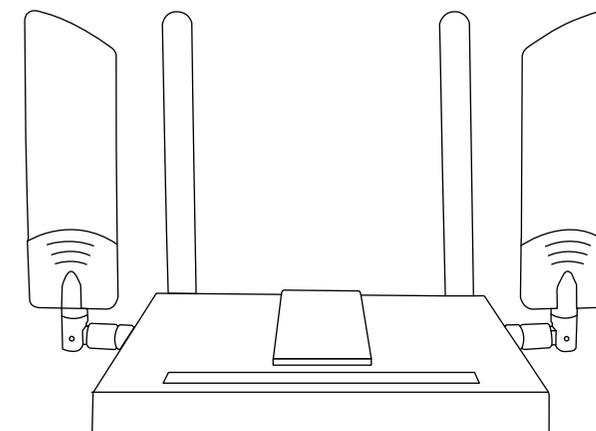

## Quick Installation Guide

FWR7302E2

[www.flyingvoice.com](http://www.flyingvoice.com)