



IP Phone User Guide

P22P

Version 1.4.0
Jul. 2025

Copyright

Copyright © 2020 Flyingvoice Network Technology CO., LTD.

Copyright © 2020 Flyingvoice Network Technology CO., LTD. All rights reserved. No parts of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, photocopying, recording, or otherwise, for any purpose, without the express written permission of Flyingvoice Network Technology CO., LTD. Under the law, reproducing includes translating into another language or format.

When this publication is made available on media, Flyingvoice Network Technology CO., LTD. gives its consent to downloading and printing copies of the content provided in this file only for private use but not for redistribution. No parts of this publication may be subject to alteration, modification or commercial use. Flyingvoice Network Technology CO., LTD. will not be liable for any damages arising from use of an illegally modified or altered publication.

Trademark

Flyingvoice®, the logo and the name and marks are trademark of Flyingvoice Network Technology CO., LTD, which are registered legally in China, the United States, EU (European Union) and other countries.

All other trademarks belong to their respective owners. Without Flyingvoice's express written permission, the recipient shall not reproduce or transmit any portion thereof in any form or by any means, with any purpose other than personal use.

Warranty

1. Warranty

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS GUIDE ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS GUIDE ARE BELIEVED TO BE ACCURATE AND PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF PRODUCTS.

2. Disclaimer

FLYINGVOICE NETWORK TECHNOLOGY CO., LTD. MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS GUIDE, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A

PARTICULAR PURPOSE. FLYINGVOICE Network Technology CO., LTD. shall not be liable for errors contained herein nor for incidental or consequential damages in connection with the furnishing, performance, or use of this guide.

3. Limitation of Liability

Flyingvoice and/or its respective suppliers are not responsible for the suitability of the information contained in this document for any reason. The information is provided "as is",

and Flyingvoice does not provide any warranty and is subject to change without notice. All risks other than risks caused by use of the information are borne by the recipient. In no event, even if Flyingvoice has been suggested the occurrence of damages that are direct, consequential, incidental, special, punitive or whatsoever (Including but not limited to loss of business profit, business interruption or loss of business information), shall not be liable for these damages.

End User License Agreement

This End User License Agreement ("EULA") is a legal agreement between you and Flyingvoice. By installing, copying or otherwise using the Products, you: (1) agree to be bounded by the terms of this EULA, (2) you are the owner or an authorized user of the device, and (3) you represent and warrant that you have the right, authority and capacity to enter into this agreement and to abide by all its terms and conditions, just as if you had signed it. The EULA for this product is available on the Flyingvoice Support page for the product.

Patent Information

China, the United States, EU (European Union) and other countries are protecting one or more patents of accompanying products and/or patents being applied by Flyingvoice.

Technical Support

Visit www.flyingvoice.com for product documents and FAQ, or contact Flyingvoice by email at support@flyingvoice.com. We'll get you the help you need.

Declaration of Conformity

Part 15 FCC Rules

FCC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following three conditions:

- This device may not cause harmful interference
- This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,

uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

CE

Manufacturer: Flyingvoice Network Technology Co., Ltd.

Address: 1801-1802, Building 1, Chongwen Park, Nanshan Zhiyuan, Nanshan District, Shenzhen, China

Hereby, Flyingvoice Network Technology Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

A copy of the declaration of conformity can be obtained with this user manual; this product is not restricted in the EU.

The full text of the EU declaration of conformity (DoC) is available at following internet address:
<https://flyingvoice.com/download.html>

The wireless operation frequency

WIFI: 2412MHz-2472MHz, Max EIRP Power 18.16 dBm

Safety warning and Attentions

If use adapter, adapter must be comply 2014/30/EU Directive.

Adapter Caution: Adapter shall be installed near the equipment and shall be easily accessible.

Do not store or use your product in temperatures higher than 50°C.

RF Exposure Statement

The distance between user and products should be no less than 20cm.

GNU GPL INFORMATION

Flyingvoice phone firmware contains third-party software under the GNU General Public License (GPL). Flyingvoice uses software under the specific terms of the GPL. Please refer to the GPL for the exact terms and conditions of the license.

The original GPL license, source code of components licensed under GPL and used in Flyingvoice products can be downloaded online:

https://www.flyingvoice.com/soft_GPL.aspx

Risk Warning Statement

This risk warning statement contains a summary of external network servers that FVUI will access under its factory settings in order to obtain necessary service support. If you want to prohibit these accesses based on security considerations, you can disable them through the WEB management page.

Number	Server Domain Name	Description	Factory Setting
1	https://rps.flyingvoice.net/frps	Flyingvoice Provision redirect server	Enable
2	pool.ntp.org/cn.pool.ntp.org	NTP server	Enable
3	https://prv3.flyingvoice.net:446	Flyingvoice Provision web management configuration server	Enable
4	https://prv4.flyingvoice.net:446	Flyingvoice Provision web management backup server	Enable

Table of Contents

About This Guide.....	6
Chapter 1 Introduction	7
1.1 Hardware Overview	7
P22P Hardware	7
1.2 LED Indicator	9
Power LED Indicator	9
1.3 Screen and Icons	9
Idle Screen	9
Calls Screen.....	10
Icons in the Status Bar	10
Line Key Icons.....	11
Other Icons	11
1.4 Entering Characters.....	12
Chapter 2 Getting Started.....	13
2.1 Phone initialization.....	13
2.2 Phone Status.....	13
2.3 Basic network settings	13
2.4 Wireless Network	14
Activating the Wi-Fi Mode.....	15
Connecting to the Wireless Network	15
Viewing Wireless Network Information.....	15
Disconnecting Wireless Network Connection.....	16
Deactivating the Wi-Fi Mode.....	16
2.5 Registration	16
Phone interface Registration	16
Web Registration.....	17
2.6 M1-M6 Configuration	18

Phone interface Registration	18
Web interface Registration	18
Chapter 3 Call Features	19
3.1 Placing Calls	19
Placing a Call from the Dialer	19
Placing Multiple Calls	20
Placing a Call from the Call History	20
Placing a Call from the Directory	20
Placing a Call using the RJ9 headset	21
Placing a Call using the DECT headset	21
3.2 Answering Calls	21
Answering a Call	21
Answering a Call When in a Call.....	22
Answering a Call Automatically.....	22
3.3 Disabling Call Waiting	23
3.4 Silencing or Rejecting Incoming Calls	23
Rejecting Calls with Do Not Disturb (DND)	23
3.5 Ending Calls	24
3.6 Muting/Unmuting Audio.....	24
3.7 Holding and Resuming Calls.....	24
Holding a Call	24
Resuming a Held Call.....	25
3.8 Redirecting Incoming Calls	25
Forwarding All Incoming Calls to a Contact.....	25
Forwarding All Incoming Calls on All Lines.....	25
Deactivating Call Forward	26
Diverting Calls to a Contact	26
3.9 Call Waiting	26
Phone interface configuration	26

Web interface configuration	27
3.10 Transferring Calls	27
Performing a Blind Transfer	27
Performing an Attended Transfer	27
3.11 Conference Calls	28
Setting Up a Local Conference Call	28
Holding or Resuming a Conference Call	28
Splitting a Conference Call	28
Ending a Conference Call	29
3.12 USB Flash Drive Recording	29
Enable USB Flash Drive Recording	29
Call Recording	29
View Recording Files	30
Recording Settings on the LCD screen	30
Recording Settings on the Web Interface	31
Upload to Third-party Recording Server	32
Chapter 4 Advanced Call Features	34
4.1 Voice Mail	34
Leaving Voice Mails	34
Listening to Voice Mails	34
4.2 MWI (Message Waiting Indicator)	35
4.3 Text Message	35
New Message	36
Viewing text messages	36
Save Text message	37
4.4 Directory	38
Local Contacts	39
Blacklist	41
4.5 Remote Phone Book	43

Remote phonebook updated to local (xml).....	43
Remote Phonebook.....	45
4.6 LDAP.....	46
4.7 Call History.....	47
Viewing History Records	47
Saving a History Record to Local Directory.....	47
Saving a History Record to Blacklist	48
Deleting History Records.....	48
4.8 Beeper	48
HB01 Call Button.....	49
PB01 USB Panic Button	49
Chapter 5 Customizing Your Phone	50
5.1 Basic Setting	50
Backlight	50
Language	50
Time & Date	51
Changing the Administrator Password	51
Call Immediately key	51
5.2 Audio Settings	52
Adjusting the Volume.....	52
Setting the Ring Tone	52
5.3 AP Mode.....	53
Enable AP Mode.....	53
Chapter 6 Maintaining Your Phone	55
6.1 Rebooting Your Phone.....	55
6.2 Resetting to Factory Settings.....	55

About This Guide

Thank you for choosing Flyingvoice P22P IP phone, which delivers the industry's leading HD audio quality and a wide range of business telephony features, such as Call Hold, Call Transfer, Busy Lamp Field, Call Recording, Paging and Conference over an IP network. Meanwhile, it features a compact appearance, robust performance and cost efficiency for daily desktop voice communications.

This guide provides everything you need to quickly use your new phone. Firstly, verify with your system administrator that the IP network is ready for phone configuration. Also be sure to read the Quick Start Guide which can be found in your phone package before you set up and use the IP phone. As you read this guide, keep in mind that some features are configurable by your system administrator or determined by your phone environment. As a result, some features may not be enabled or may operate differently on your phone. Additionally, the examples and graphics in this guide may not directly reflect what is displayed or is available on your phone screen.

Related Documentation

The following types of related documents are available on each page:

- Datasheet
- Quick start guide

Chapter 1 Introduction

This chapter provides the overview of phone hardware and screen layout, and how to navigate your phone for the best performance.

Topics

[Hardware Overview](#)

[LED Indicator](#)

[Screen and Icons](#)

[Entering Characters](#)


1.1 Hardware Overview

Topics

[P22 Series Hardware](#)

P22P Hardware

The main hardware components of P22P include LCD interface and buttons, as shown in the figure below.

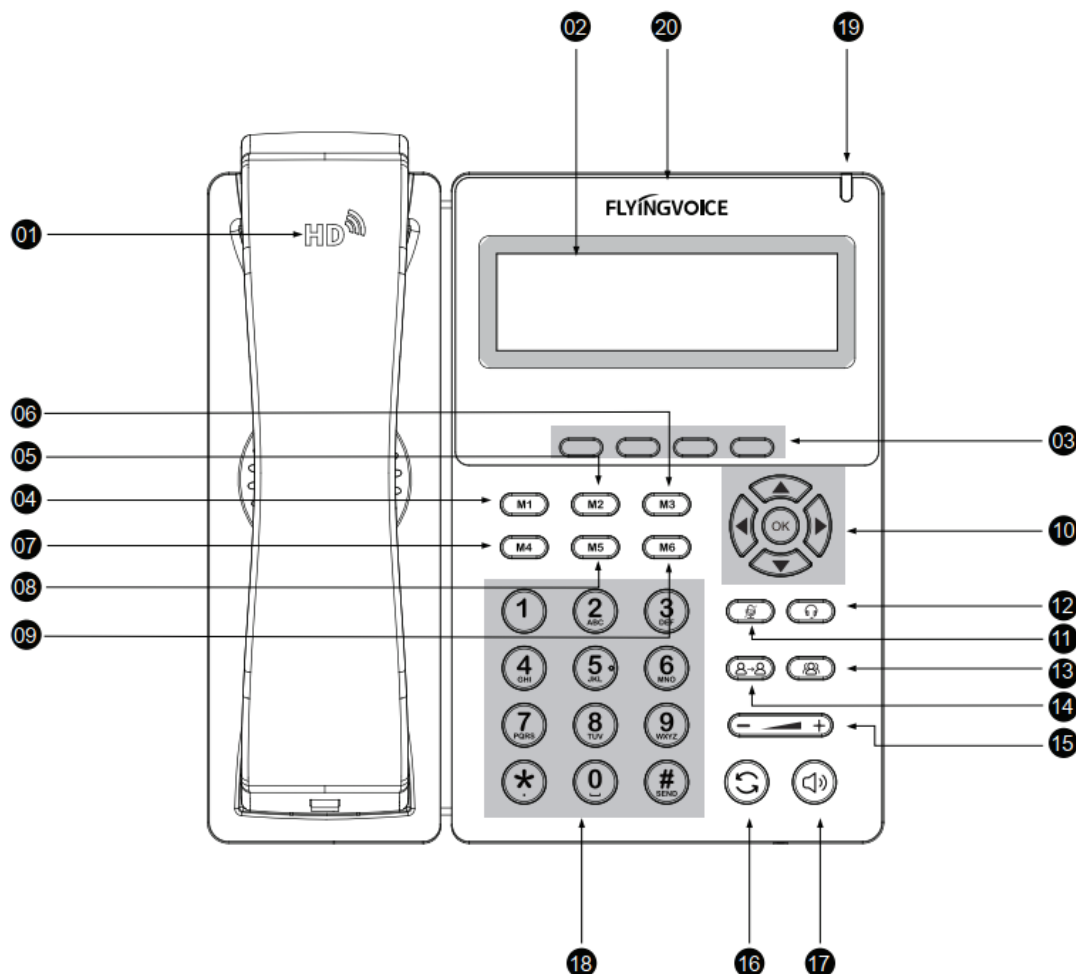

The main hardware components of the P22P IP phone are described as follows.

NO.	Item	Description
1	Handset	Handset to pick up and answer call
2	Phone Screen	Shows information about your phone, such as calls, messages, soft keys, time and date
3	Soft Keys	Access the function displayed on the screen above the soft keys. The soft keys change depending on what you are doing at the time
4	M1 Key	The default is speed dial, and the function can be defined
5	M2 Key	The default is speed dial, and the function can be defined
6	M3 Key	The default is speed dial, and the function can be defined
7	M4 Key	The default is speed dial, and the function can be defined
8	M5 Key	The default is speed dial, and the function can be defined
9	M6 Key	The default is speed dial, and the function can be defined
10	Navigation Keys	Scroll through information or options displayed on the screen. Access History and Directory respectively
	OK Key	Confirms actions or answers incoming calls.
11	Mute Key	Toggles and indicates the mute feature. The key LED glows red when the call
12	Headset Key	Toggles and indicates the headset mode. The key LED glows green when headset mode is activated.
13	Conference Key	Join the Conference call
14	Transfer Key	Transfers a call to another party
15	Volume Key	Adjusts the volume of the handset, headset, and speaker
16	Redial Key	Redials a previously dialed number

17	Speakerphone Key	Toggles and indicates the hands-free (speakerphone) mode. The key LED glows green when the hands-free (speakerphone) mode is activated
18	Keypad	Provides the digits and special characters in context-sensitive applications
19	Power LED Indicator	Indicates call status, message status, and phone's system status
20	Logo	FLYINGVOICE Logo

1.2 LED Indicator

Power LED Indicator

The power LED indicator indicates the call, message and phone's system status.

LED Status	Description
Slowly-flashing red (5 flashes in 1s)	The phone is ringing
Slowly-flashing red (1 flashes in 1s, every 4s)	The phone receives missed calls or text message
Slowly-flashing red (2 flashes in 1s)	The phone receives voice message
OFF	The phone is powered off or idle

1.3 Screen and Icons

The user screens and icon indicators can help you navigate and understand the important information on the phone's status.

Topics

[Idle Screen](#)

[Calls Screen](#)


[Icons in the Status Bar](#)

[Line Key Icons](#)

[Other Icons](#)

Idle Screen

The idle screen is made up of the status bar, line keys, and soft keys. The time & date in the status bar or middle of the screen varies by phone models.

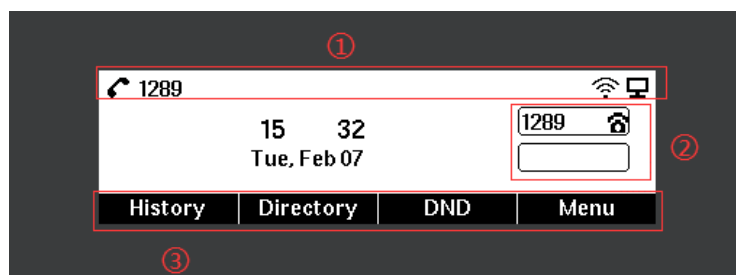

1. Status Bar: Display the default account, feature status icons, and the time. The status icons are displayed when features are activated. For more information, please refer to the [Icons in the Status Bar](#)
2. Account: Display the information associated with the account name and registration status.
3. Soft Keys: Display the information associated with the feature keys.


Calls Screen

All of your active and held calls are displayed on the calls screen. You can press up or down navigation key to switch among calls.

Check with your system administrator to find out if this feature is available on the phone. When there is an active call and a held call, the calls screen is shown below:



You can go to **Menu > My Status** to view Network and phone status. The phone screen is shown below:

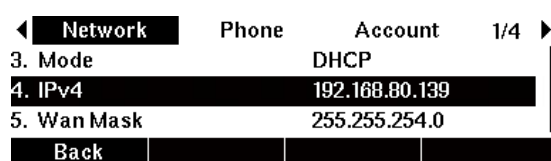

Icons in the Status Bar

Icons in the status bar vary by phone models.

Icon	Description	Icon	Description
	Wired network is available		Auto Answer
	Wired network is unreachable		Do Not Disturb (DND)
	Speaker mode		Keep Mute

	Handset mode		Ringer volume is 0
	Headset mode		Missed Calls
	Voice Mail		Call Forward
	Call is on hold		Recording
	WIFI is connected		WIFI is disconnected
	Text Message		USB flash drive is connected

Line Key Icons

Icons on the line key that vary by phone models.

Icon indicators (associated with line)

Icon	Description
	The private line is registered successfully
	Register failed

Other Icons

Call History


Icon	Description
	Received Calls
	Placed Calls
	Missed Calls

Contact

Icon	Description
	Default Contact Picture

Call

Icon	Description
------	-------------

 	Waiting
	Calling

Icons displayed on the LCD interface (Text Message icons).

Icon	Description
	Unread text message
	Read text messages
	Sent messages / Outbox messages
	Drafting Box Information

1.4 Entering Characters

You can use the keypad keys on your phone to enter or update field information.

The following table describes how to enter different characters using the keypad keys.

Task	Action
Switch input modes	Press the ABC , abc , Ab2 , 2aB , or 123 soft key to switch the input modes.
Enter alphas	Select ABC , abc , 2aB mode. press the keys labeled with letters until your desired letter appears. press a keypad key repeatedly to view the character options and stop when the letter you want to enter is displayed in the field. Wait one second, and then enter the next letter.
Enter numbers	Select 123 mode, press the corresponding keys.
Enter special characters	Select ABC , abc , 2aB mode, press * key or # key one or more times to enter one of the following special characters: * key: *, ' ! \ - () @ / : ; + & % = < > £ \$ ¥ ¤ [] {} ~ ^ i ¢ \$ # " # key: # In 123 mode, you can press the * key to choose the following special characters: . * : / @ [] .
Insert space	Select ABC , abc , 2aB mode, press the 0 key.
Delete one or more characters	Position the cursor to the right of the character, and select the Delete soft key.

Chapter 2 Getting Started

This chapter introduces the introductory operation of the P22P phones.

For more information and help, please contact us.

Topic

[Phone initialization](#)

[Phone Status](#)

[Basic network settings](#)

[Wireless network settings](#)

[Registration](#)

2.1 Phone initialization

After the phone is powered on, the following steps will be performed.

1. the "FLYINGVOICE" logo is displayed on the LCD interface
2. When the phone is initialized, wait for the progress bar to finish loading.
3. After the phone starts normally, it can obtain network configuration through DHCP.

By default, the phone obtains network configuration such as IP address, subnet mask, default gateway address and DNS server through DHCP server.

Note: If the phone cannot get the network configuration through DHCP server, please do the basic network settings on page 17.

2.2 Phone Status

Procedure

You can press **Menu**, then press **My Status** to view the Network and Phone status.

The phone screen is shown below:



2.3 Basic network settings

If the phone cannot get the network configuration through DHCP server, you need to set it

manually.

The phone supports IP mode: IPv4, IPv6.

Set the IP address mode through the phone interface:

1. Press **Menu**->**Advanced Settings** (default password: admin)->**Network**->**WAN Port**

WAN Port	
1. IPv4	
2. IPv6	
Back	Enter

2. Select **IPv4** or **IPv6**
3. Press **Switch** key to switch the type of IPv4 WAN port, select **Static IP** and **DHCP**

IPv4 WAN Port	
1. Mode	DHCP <>
2. Static DNS	Disable <>
Back	Switch Save

Set a Static IPv4 address through the phone interface:

1. Press **Menu**->**Advanced Settings** (default password: admin)->**Network**->**WAN Port**->**IPv4**
2. Press **Switch** key to switch select **Static IP**
3. Enter the **IP address**, **Mask**, **Default Gateway**, **Primary DNS** and **Secondary DNS** in the corresponding area respectively

IPv4 WAN Port	
1. Mode	Static IP <>
2. IP Address	
3. Mask	
Back	123 Delete Save

4. Press the **OK** to save the operation

Tips

Incorrect network settings may cause the network to be unavailable and may also have an impact on the performance of the network. To learn more about the parameters, please consult your system administrator.

2.4 Wireless Network

You can connect the phones to a wireless network if Wi-Fi is available within the area. For more information, contact your system administrator.

Topics

[Activating the Wi-Fi Mode](#)

[Connecting to the Wireless Network](#)

[Viewing the Wireless Network Information](#)

[Disconnecting the Wireless Network Connection](#)

[Deactivating the Wi-Fi Mode](#)


Activating the Wi-Fi Mode

You can activate the Wi-Fi mode to connect your phone to an available wireless network.

Procedure

1. Navigate to **Menu > Basic > Wi-Fi**.
2. Select **On** from the **Wi-Fi** field.
3. Select **OK**.

The phone scans the available wireless networks in your area.

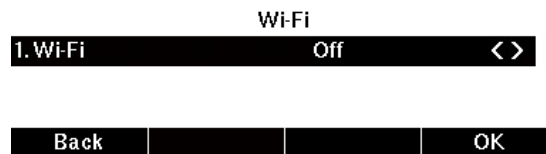

Connecting to the Wireless Network

After you have activated the Wi-Fi mode, you can connect the phone to the wireless network.

Connecting to an Available Wireless Network Manually


When you enable the Wi-Fi mode, the phone automatically connects to the saved wireless network, you can also connect it manually.

Before You Begin

Get the password of the wireless network from your system administrator. Make sure that the Wi-Fi mode is activated.

Procedure

1. Navigate to **Menu > Basic > Wi-Fi**.
2. Press the **Available Network(s)**.
3. Optional: To research the available network, select **Scan**.

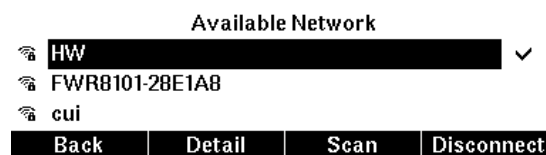

4. Select the desired wireless network and select **Connect**.
5. If the network is secure, enter its password.
6. Select **OK**.

Viewing Wireless Network Information

You can view the wireless network information (for example, Profile Name, SSID or Signal Strength) when the Wi-Fi mode is activated.

Procedure

1. Navigate to **Menu > Basic > Wi-Fi > Available Network(s)**

2. Select the desired network to view the detailed wireless network information.

If the phone is connected to a wireless network successfully, you can also navigate to **Menu > Basic > Wi-Fi > Wi-Fi Status** to view the connected wireless network information.

Disconnecting Wireless Network Connection

When you no longer want to connect to the current wireless network, you can disconnect it.

Procedure

1. Navigate to **Menu > Basic > Wi-Fi**.
2. Select **Available Network(s)**.
3. Press the connected wireless network, and select **Discon**.

Tip: You can also disconnect the wireless network when deactivating the Wi-Fi mode.

Deactivating the Wi-Fi Mode

You should deactivate the Wi-Fi mode when you need to connect your phone to the wired network.

Note: When the phone uses the Wireless connection the Ethernet cable connection in the same time, the Wireless connection has the higher priority.

Procedure

1. Navigate to **Menu > Basic > Wi-Fi**.
2. Select **Off** from the **Wi-Fi** field.
3. Select **OK**.

2.5 Registration

Usually, the system administrator will pre-configure the relevant parameters and deploy all phones centrally, in this case, the phones are usually already registered with accounts.

The P2P IP phone supports 2 account registrations. If the phone is not registered, you need to register it manually.

Topic

[Phone interface Registration](#)

[Web Interface Registration](#)

Phone interface Registration

You can register one or more accounts on the phone

1. Press **Menu -> Advanced Settings** (default password is admin) -> **Account**

2. Select the account you want to set up, click **OK**
3. Press the **Switch** key to switch the account status, and choose to turn on
4. Fill in the corresponding information in the **Display Name, Registered Name, User Name, Password, Sip Server, SIP Port**, respectively
5. If you want to use outbound proxy server, please enter the corresponding server address in the corresponding proxy server option
6. Press the **OK** key to save the operation

Line 1

1. Registration	Enable	< >
2. Display Name	1289	
3. Register Name	1289	
Back		Switch Save

Repeat steps 2-6 to complete the registration of all accounts.

Disable the account via the phone interface.

1. Press **Menu**->**Advanced Settings** (default password is admin)->**Account**
2. Select the account you want to set, press Enter
3. Press **Switch** to switch the account status, select **Disable**
4. Press the **OK** Key to save

Web Registration

You can register one or more accounts on the webpage

1. After checking the IP address of the phone, enter the IP address in the browser and enter the web management page of the phone (Example: IPv4 address: <http://192.168.1.100>)

Tip: Default Administrator Username and Password are "admin"

2. Click **SIP Account**->**Line x**, drop down and select **Line Enable** to **enable**, fill in user information (**Display Name, Phone Name, Account, Password**), Proxy and Registration information (**Proxy server, Proxy port, Transport**)

The screenshot shows the FLYINGVOICE web management interface. The top navigation bar includes tabs for Status, Network, SIP Account (selected), Phone, and Administration. Below this, there are sub-tabs for Line 1, Line 2, SIP Settings, VoIP QoS, and Ring. The main content area is titled 'Basic' and contains several sections: 'Register Status' (showing 'Registered'), 'Basic Setup' (with a 'Line Enable' dropdown set to 'Enable'), 'Subscriber Information' (with fields for Display Name, Account, Phone Number, and Password), and 'Proxy and Registration' (with fields for Proxy Server, Outbound Server, Backup Outbound Server, Proxy Port, Outbound Port, Backup Outbound Port, Allow DHCP Option 120 to Override SIP Server, and Transport). A right sidebar contains a 'Help' section with links to Basic, Audio Configuration, Supplementary Service Subscription, and Proxy Port.

3. Click **Save & Apply** to save the operation

Disable the account via the web interface:

1. Click **SIP Account**->**Line x**, drop down and select Account **Disable**

Tips

Incorrect network settings may cause the network to be unavailable and may also have an impact on the performance of the network. To learn more about the parameters, please consult your system administrator.

2.6 M1-M6 Configuration

M1-M6, the default type is SpeedDial, you need to configure it in the Web Page.

Tips: The value defaults to Null, the line defaults to Line1.

Phone interface Registration

Procedure

1. Long press the **M1** key (M1~M6) -> Select the account -> fill in the number.
2. Click **Save**.

Web interface Registration

Procedure

1. Press **Phone**-> **Programmable Key**
2. M1~M6-> Fill in the number in the **value**
3. Click **Save** and wait for it to take effect.

Note: You can also Select the type or line you want, and fill in the value.

Key	Type	Line	Value	Label	Extension
SoftKey 1	History				
SoftKey 2	Directory				
SoftKey 3	DND				
SoftKey 4	Menu				
Up	N/A				
Down	N/A				
Left	SwitchAccour				
Right	SwitchAccour				
OK	Status				
Conference	N/A				
Redial	N/A				
TRAN	N/A				
M1	SpeedDial	Line1			
M2	SpeedDial	Line1			
M3	SpeedDial	Line1			
M4	SpeedDial	Line1			
M5	SpeedDial	Line1			
M6	SpeedDial	Line1			

Save Cancel Reboot

Chapter 3 Call Features

You can use the phone to place and answer calls, ignore incoming calls, transfer a call to someone else, conduct a conference call and perform other basic call features.

Topics

[Placing Calls](#)

[Answering Calls](#)

[Disabling Call Waiting](#)

[Silencing or Rejecting Incoming Calls](#)

[Ending Calls](#)

[Muting/Unmuting Audio](#)

[Holding and Resuming Calls](#)

[Redirecting Incoming Calls](#)

[Redirecting Incoming Calls](#)

[Call Waiting](#)

[Transferring Calls](#)

[Conference Calls](#)

3.1 Placing Calls

You can use your phone like a regular phone to place calls in many ways easily.

Topics

[Placing a Call from the Dialer](#)

[Placing Multiple Calls](#)

[Redialing a Number](#)

[Placing a Call from the Call History](#)

[Placing a Call from the Directory](#)

Placing a Call from the Dialer

The Dialer enables you to enter a number to place a call, and it displays a list of previously placed calls or contacts in your directory.

You can also select the desired contact from the search list, the placed call list or Directory.

Procedure

1. Do one of the following:

- Start typing a phone number.
- Select the desired line key.
- Pick up the handset, press the Speakerphone key  or the HEADSET key .

2. Enter a number or select a contact.

3. Select **Send**.



Tip: Your system administrator can enable the live dial-pad feature, which enables your phone to automatically dial out the phone number after some time without selecting **Send**.

Placing Multiple Calls

When you are in a call, you can hold your current call and place a new call.

Procedure

1. Press **Hold** to place the original call on hold.
2. Press **NewCall**, enter the desired number or select a contact.



3. Select **Send**.

Tip: Only one call is active at any time, and other calls are on hold. You can press **Swap** to switch the call.



Placing a Call from the Call History

You can place calls to contacts from the History list, which contains the calls that were recently placed, answered, missed, or forwarded.

Procedure

1. Press **History**.
*The phone screen displays **All/Missed/Dialled/Received** call records.*
2. Select the desired number, it will make the call automatically.

Placing a Call from the Directory

You can place a call to a contact directly from your directory.

Procedure

1. Select **Directory** or navigate to **Menu > Directory > Local Contacts**.
2. Select the desired contact group or **All Contacts**.
3. Select the desired contact and press the desired number.

Placing a Call using the RJ9 headset

Connect the headset, press  to activate the headset mode, enter the number and press the **Send** soft key.

Placing a Call using the DECT headset

Connect the headset, enter the number and press the **Send** soft key.

Tip: After the connection is completed, LCD interface display "USB headset connected".

Brands and models of DECT headsets supported by P22 series IP phones.

Brands	Models
Plantronics	CS520
	CS540
Jabra	PRO 920
	PRO 925
	PRO 9460
	PRO 9470
	Motion Office
	Engage 65 Stereo&Mono
Jabra	Engage 75 Convertible
	Engage 75 Stereo&Mono
Sennheiser	SDW5016

3.2 Answering Calls

When you receive a call, you can choose to answer it manually or automatically.

Topics

[Answering a Call](#)

[Answering a Call When in a Call](#)

[Answering a Call Automatically](#)

Answering a Call

When you receive an incoming call, the phone rings and the screen displays the information of the incoming call. You can choose to answer the incoming call.

Procedure

1. Do one of the following:

- Pick up the handset.
- Press the Speakerphone key .
- Press the HEADSET key.
- Press **Answer**.


The call is answered in the speakerphone (hands-free) mode by default.

Tip: You can also select an RJ headset or DECT headset to answer.

Answering a Call When in a Call

You can answer a call when there is already an active call on your phone.

When you are in an active call and an incoming call arrives on the phone, a call waiting tone beeps, and the incoming call information is displayed.

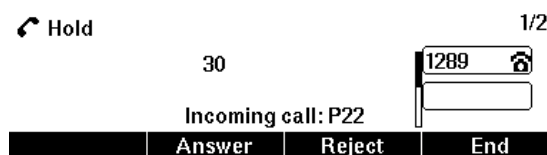

Procedure

1. Select **Answer**.

The active call is placed on hold, and the incoming call becomes active.

Tip:

You can disable the call waiting feature to reject the incoming call automatically during a call.

Answering a Call Automatically

The auto answer enables you to automatically answer an incoming call in speakerphone (hands-free) mode when your phone is idle.


Tip: When you are in an active call and an incoming call arrives on the phone, the incoming call will not be automatically answered even if the auto answer is enabled.

Your system administrator can configure the phone to automatically answer the incoming call after ending all calls.

Phone interface

Procedure

1. Navigate to **Menu > Features > Auto Answer > Auto Answer Settings**.
2. Enable the **Auto Answer**.

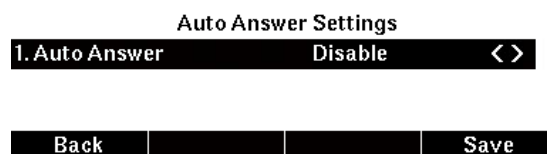

3. Select **OK**.

Web interface

Procedure

1. Navigate to **Phone-> Preferences-> Miscellaneous->Auto Answer All Phone Number -> Save & apply**

Miscellaneous

Auto Answer All Phone Number	Disable ▾
Auto Answer Delay Time	Disable Enable
Dial Time Out (IDT)	5
Auto On-hook Mode	Enable ▾

3.3 Disabling Call Waiting

If the call waiting feature is disabled, when there is already a call, the new incoming call will be rejected automatically.

Procedure

1. Navigate to **Menu > Features > Call Waiting > Call Waiting Settings**.
2. Select **Disable**.
3. Select **OK**.

3.4 Silencing or Rejecting Incoming Calls

When you receive an incoming call, you can choose to silence or reject the call instead of answering.

Rejecting Calls with Do Not Disturb (DND)

You can enable DND to reject all incoming calls automatically when you do not want to be interrupted.

Topics

[Rejecting Calls with DND](#)

[Deactivating DND](#)

Rejecting Calls with DND

Procedure

1. Navigate to **Menu > Features > DND**.
2. Select **Enable** from the DND Status field.
3. Select **OK**.

The DND icon  appears in the status bar.

Tip: To activate or deactivate DND quickly, press the DND soft key when the phone is idle.

Deactivating DND

You can deactivate DND when you are ready to resume receiving calls again.

Procedure

1. Navigate to **Menu > Features > DND**.
2. Select **Disable** from the DND Status field.
3. Select **OK**.

The DND icon  disappears from the status bar.

Tip: To deactivate DND quickly, press the **DND** soft key when the phone is idle.

3.5 Ending Calls

You can end the current call at any time.

Procedure

1. Do one of the following:
 - If you are using the handset, press the **EndCall** key or hang up the handset.
 - If you are using the speakerphone, press the **EndCall** key or Speakerphone key .

3.6 Muting/Unmuting Audio

When you are in a call, you can mute the audio, so that you can hear the other person, but they cannot hear you.

Procedure

1. Press the MUTE key during a call.
2. Press the MUTE key again to unmute the call.



3.7 Holding and Resuming Calls

You can place an active call on hold and resume the call when you are ready. When you place a call on hold, the held party may hear the music played by its sever.

Topics

[Holding a Call](#)

[Resuming a Held Call](#)

Holding a Call

You can place an active call on hold on your phone.

Procedure

Press **Hold** during a call.

The phone ignores engaged audio devices (handset or headset) and plays beep in the Speakerphone (hands-free) mode by default.

Resuming a Held Call

You can view and resume a held call on the phone.

Procedure

Press **Resume**.

If multiple calls are placed on hold, select the desired call first.

Tip: When you have multiple calls on the phone and the current call is active, you can select **Swap** to swap to the held call.

3.8 Redirecting Incoming Calls

When you are not available to answer calls on your phone, you can forward the calls to another phone.

Topics

[Forwarding All Incoming Calls to a Contact](#)

[Forwarding All Incoming Calls on All Lines](#)

[Deactivating Call Forward](#)

[Diverting Calls to a Contact](#)

Forwarding All Incoming Calls to a Contact

You can set up the forwarding type which enables your phone to forward all incoming calls to a contact. There are three types of forwarding:

Always Forward: Forwards all incoming calls immediately.

Busy Forward: Forwards incoming calls when you are busy in a call.

No Answer Forward: Forwards incoming calls when no one answers the calls.

Call Forward			
1. Always Forward			
2. Busy Forward			
3. No Answer Forward			
Back			Enter

Forwarding All Incoming Calls on All Lines

You can forward all incoming calls on the phone.

Before You Begin

Check with your system administrator if the forward on code or off code is required. If required, get it from your system administrator.

Procedure

1. Navigate to **Menu > Features > Call Forward**.
2. Select the desired forwarding type and select **Enable** from the corresponding field.
3. Enter the contact number you want to forward incoming calls to in the **Forward to** field.
4. If you select the **No Answer Forward** option, select the desired ring time to wait before forwarding from the field.
5. Optional: Enter the always/busy/no answer forward on code or off code respectively in the **On Code** or **Off Code** field.
6. Select **OK**.

The call forward icon  appears in the status bar.

Deactivating Call Forward

You can deactivate call forward when you no longer want to forward your calls.

Procedure

1. Navigate to **Menu > Features > Call Forward**.
2. Select the desired forwarding type and select **Disable** from the corresponding field.
3. Select **OK**.

Diverting Calls to a Contact

You can divert all incoming calls from a particular contact to another contact. Auto divert has precedence over call forward.

Procedure

1. Select **Directory (Dir)** or navigate to **Menu > Directory > Local Contacts**.
2. Select the desired contact group or All Contacts.
3. Select the desired contact, and select **Detail**.
4. Edit the contact information.
5. Enter a contact's number you want to divert the call to in the Auto Divert field.
6. Select **Save**.

3.9 Call Waiting

The call waiting feature can be turned on or off.

If the call waiting feature is enabled, new incoming calls can be answered during a call.

If call waiting is turned off, new calls will be automatically rejected during the call and a busy tone will be indicated.

Phone interface configuration

Procedure

1. Press **Menu -> Features -> Call Waiting -> Call Waiting Settings**, click **Switch** key, select

On

2. Press the **OK** key to save the operation

Web interface configuration

Procedure

1. **SIP Account**->**Line x** -> **Call Waiting**, turn on call waiting, **save and apply**.

Call Waiting	Enable ▼	Hotline	
Enable MWI	Enable ▼	Voice Mailbox Numbers	*2
MWI Subscribe Enable	Disable ▼	Voice Mail Display	Disable ▼
MWI Subscription Period(Seconds)	3600	Outgoing Call Active Password	
Outgoing Call Block Password			
Emergency Call Num			

3.10 Transferring Calls

During a call, you can transfer the call to another contact. You can use one of two ways:

- **Blind Transfer:** Transfer a call directly to the third party without consulting.
- **Attended Transfer (Consultative Transfer):** Transfer a call with prior consulting.

Topics

[Performing a Blind Transfer](#)

[Performing an Attended Transfer](#)

Performing a Blind Transfer

You can transfer a call to another contact immediately without consulting with her/him first.

Procedure

1. Press **Transfer (XFER)** during a call.
2. Do one of the following:
 - Enter the number or select a contact from the placed call list you want to transfer to.
 - Press **Directory (Dir)**. Select the desired contact from the Directory list.
3. Press **TRAN** key or **XFER** to complete the transfer.

Tip: If you are using a handset, the transfer can be completed by hanging up the handset.

Your system administrator can also set your phone to perform attended transfer when using a Transfer key.

Performing an Attended Transfer

You can transfer a call to another contact after consulting with her/him.

Procedure

1. Press **Transfer (Trans)** during a call.
2. Do one of the following:
 - Enter the number or select a contact from the placed call list you want to transfer to.

- Press **Directory (Dir)**. Select the desired contact from the Directory list.
3. Wait until the third party answers the call, press TRAN key to complete the transfer.

3.11 Conference Calls

The phone supports a 6-way local conference and multi-way network conference. During the conference, follow these tips:

- Use the handset or a headset if you're in an open environment.
- Mute your microphone when you are not speaking, especially in noisy environments.
- Avoid tapping or rustling papers near the microphone.
- Speak in your normal voice without shouting.

Tip: Check with your system administrator to find out if the local conference is enabled on your phone.

Topics

[Setting Up a Local Conference Call](#)

[Holding or Resuming a Conference Call](#)

[Splitting a Conference Call](#)

[Ending a Conference Call](#)

Setting Up a Local Conference Call

You can set up a local conference call with up to five contacts.

Procedure

1. Place a call to the first party.
2. When the first party answers the call, select **Conference (Conf)** to place a new call.
The active call is placed on hold.

3. Dial the second party's number.

You can also select the desired contact from the search list, or select a contact from the placed call list or Directory before you enter the number.

4. Wait until the second party answers the call, press the **Conference (Conf)** key.
5. At this point, a three-person meeting was generated.

Holding or Resuming a Conference Call

When you place a conference call on hold, other participants cannot hear each other until you resume the held conference call.

Procedure

1. Press **Hold** to place the conference on hold.
2. Press **Resume** to resume the held conference call.

Splitting a Conference Call

You can split the conference call into individual calls. After the split, the conference call ends,

and other parties are on hold. Press **Resume** to resume one of the held call or hang up.

Procedure

1. Select **Split**.
2. Press the navigation key up or down to select a held call.
3. Press Resume.

Ending a Conference Call

When you end the conference call, the other parties drop the call.

Procedure

1. Select **End Call (End C)**.

3.12 USB Flash Drive Recording

Topic

[Enable USB flash drive record](#)

[Call recording](#)


[View Recording Files](#)

[Phone setting recording](#)

[Web setting recording](#)

Enable USB Flash Drive Recording

1. Insert the USB flash drive into the USB port of the phone, the status bar shows the icon .
2. Press **Menu**->**Features**->**USB Record**.
3. Press  or  to select USB Record **Enable**.
4. Press the **OK** key.

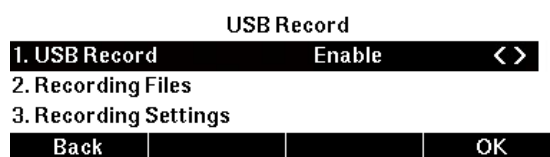


Call Recording


1. Dial an extension of the other party, press **More**->**Start REC**.
2. When finished with the recording, press the **StopReC** key to Pause the recording.
3. During the recording process, you can press the **PauseREC** and **ResumeREC** keys. It also supports stop recording and then start recording again, you can record multiple recordings

View Recording Files


1. Press **Menu->Features->USB Record->Recording Files**
2. Search for recording files: enter the file name in the search box to find the file
3. Listen to the recording file: press the recording file, press the play key to listen to the recording content, you can also press the **Fast Forward** key, **Fast Rewind** key, drag the screen progress bar to listen to the specified audio area.
4. View recording details: press **Option** to the right of a recording file in the list and press **Details**.

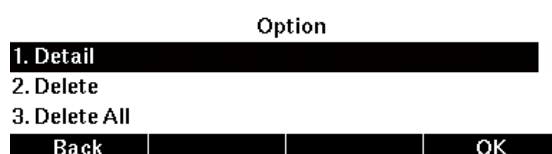

5. Delete a single recording file: press **Delete** in the pop-up box, prompting "Delete selected item?".

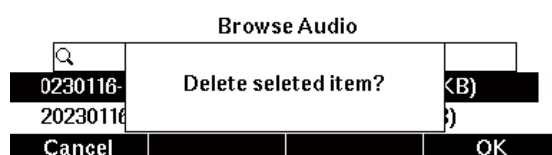


6. Delete all recording file: press **Delete All** in the pop-up box, prompting "Delete All?".

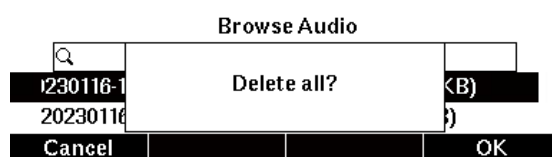

Recording Settings on the LCD screen

1. Press **Menu->Features-> USB Record->Recording Settings**
2. Press the **Call Recording Mode**, press ◀ or ▶, select the call recording mode **Manual Recording or Automatic Recording** (The default is Manual Recording), press the **OK** key.

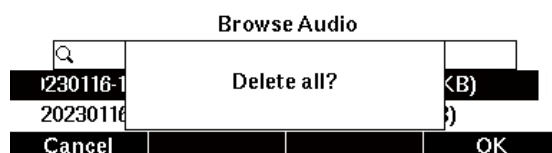

3. Press **Recording File Settings**, press ◀ or ▶, select Delete manually or Auto Delete when the U flash drive capacity is full (default is Delete manually), press the **OK** key.

Recording file settings

1. When the U disk capacity Delete manually <>

Back Enter

1. You can press **Browse storage space** to view the **Total** space, **Used** space and **Free**(available) space.

Browse storage space

1. Total 27.4G
 2. Used 8.4M
 3. Free 27.4G

Back Enter

Recording Settings on the Web Interface

1. On your phone, press **Menu->Status**, check the IPv4 address of the phone, log into the phone's web interface with it, go to **Phone -> Call Recording** page.
2. Modify the recording settings: **Recording query -> Recording settings**, drop down and select **Recording mode** as U flash drive recording, you can select the call recording as **Manual recording/Automatic recording**, select the **Recording deletion mode** as manual deletion/automatic deletion, click **save** key.

Recording query

Recording settings

Recording mode: SIP INFO (dropdown)
 Recording deletion mode: Manual deletion (dropdown)
 Call recording: Auto recording (dropdown)
 Save

Help

Call Recording:
 You can record a call, and save the recordings through PBX server or USB flash drive.

Recording settings:
 You can select the recording type

3. Search for recording files: **Recording query->Recording files**, enter the recording file name in the search box, press the **SCAN** key to retrieve the desired recording file.

Recording files

Search box: [] SCAN Bulk deletion Bulk download

	time	Peer number	Native number	Type	Duration	File size	operate
☐	2022-09-21 14:17:43	6625	1002	Outgoing	00:00:01	9KB	🗑️ ⬇️
☐	2022-09-21 14:17:40	6625	1002	Outgoing	00:00:01	12KB	🗑️ ⬇️
☐	2022-09-21 14:15:57	6625	1002	Outgoing	00:00:00	6KB	🗑️ ⬇️

4. Delete recording file: In the **Recording query->Recording files** page, select the desired file, click the **delete** icon on the right side of the file list, or click **Bulk deletion** after selecting multiple files, the interface pops up a prompt box, click **OK**.
5. Download recording file: In the **Recording query -> recording files** page, click the **download** icon on the right side of the file list or click **Bulk download** after selecting multiple files.

Upload to Third-party Recording Server

P2X phone supports uploading local recording files to a designated third-party server (URL) via USB drive recording, either manually or automatically. This facilitates centralized recording storage and management for enterprises.

Automatic Upload of USB Recording Files to Recording Server:

1. On the phone, navigate to: **Phone** -> **Call Recording** -> **Recording Settings**.
2. Under Recording Mode, select USB Recording and enable **Upload to URL** (supports TFTP/FTP).

Example:

TFTP Address: tftp://192.168.10.8 (No authentication required for TFTP)

or FTP Address: ftp://192.168.10.8 (Username/password must be provided if required by the server).

3. Select **Upload Method** -> **Auto upload**. Optionally enable Automatically Delete Local File After Upload (Disable/Enable).
4. Click **Save**.

The screenshot shows the 'Recording query' settings page. At the top is a navigation bar with tabs: Preferences, Programmable Key, Line Key, Ext Key, Dial Rule, Phone Book, Call Recording, and Call Log. Below this is a sub-tab bar with 'Web Dial' and 'Multicast IP'. The main content area is titled 'Recording query' and contains a 'Recording settings' section. This section has several fields: 'Recording mode' (set to 'U disk recording' with a red box and number 1), 'Recording file is full' (set to 'Manual deletion'), 'Upload to URL' (set to 'Enabled' with a red box and number 2), 'Recording URL' (set to 'tftp://192.168.10.'), 'Username' (empty), 'Password' (empty), 'Upload method' (set to 'Auto upload' with a red box and number 4), and 'Auto Delete Local File After Upload' (set to 'Disabled'). A red box and number 3 highlight the 'Enabled' status of 'Upload to URL' and the 'Recording URL' field. A red box and number 5 highlight the 'Save' button at the bottom left.

Manual Upload of USB Recording Files to Recording Server:

The phone supports manually uploading local recording files from the USB drive to the recording server (URL). This method retains local files after upload.

1. On the phone, navigate to: **Phone** -> **Call Recording** -> **U disk Record file**.
2. Select the file(s) to upload and click the **Upload** button.

U disk record file

SCAN

Bulk deletion

Bulk download

☐	time	Peer number	Native number	Type	Duration	File size	operate
☐	2025-06-11 15:44:32	1158	182	Outgoing	00:00:23	181KB	
☐	2025-06-11 15:44:03	1158	182	Outgoing	00:00:06	50KB	
☐	2025-06-11 14:49:57	1158	117	Outgoing	00:00:08	65KB	
☐	2025-06-09 11:50:14	1002	1001	Incoming	00:00:13	106KB	
☐	2025-06-09 11:43:30	331	238	Outgoing	00:00:12	100KB	
☐	2025-06-09 11:42:24	221	238	Incoming	00:00:11	90KB	
☐	2025-06-09 11:41:25	5011	5010	Incoming	00:00:13	103KB	

Chapter 4 Advanced Call Features

You can perform some server-dependent tasks on the phone. Contact your system administrator to find out if your phone supports these advanced call features.

Topic

[Voice Mail](#)

[MWI \(Message Waiting Indicator\)](#)

[Voice Mail](#)

[Directory](#)

[Remote Phone Book](#)

[LDAP](#)

[Call History](#)

[Beeper](#)

4.1 Voice Mail

Voice Mail feature allows you to leave voice messages for someone or listen to your voice mail messages on your IP phones.

This feature is set up on the server-side and not all servers support this feature.

Topics

[Leaving Voice Mails](#)

[Listening to Voice Mails](#)

Leaving Voice Mails

You can leave a voice mail to someone who is busy or inconvenient to answer the call.

Procedure

1. Follow the voice prompts to leave a voice mail.
2. Hang up to complete the voice mail.

Listening to Voice Mails

You can listen to your voice mails on the phone, to obtain voice information sent by a contact.

Before You Begin

You need to set the voice mail code in advance.

Procedure

1. Navigate to **Menu > Message > Voice Mail**.

The phone screen displays the amount of new and old voice mails.

2. Select an account, and then select **Connect**.
3. Follow the voice prompt to listen to your voice mails.

Tip: When the phone prompts that the phone receives a new voice mail, you can press the **Connect** soft key to dial out the voice mail access code directly.

4.2 MWI (Message Waiting Indicator)

When a voice message is received, the phone will prompt messages, the voice message icons appear on the LCD interface, and the power indicator slowly flashes red. When all voice messages are checked or deleted, the voice icon disappears and the power indicator turns off.

Tip: Not all servers support the MWI function. For more information, please consult your system administrator.

Option	Description
MWI Enabled	Enable or disable MWI service
MWI Subscription Enabled	Before the MWI subscription cycle expires, the phone resends the MWI subscription request.

Tip: The type of MWI subscription service used by the phone (account-based or voice-message number-based) depends on the server selected. For more information, please consult your system administrator.

Procedure

To set up MWI enable via the web interface.

1. Click **SIP Account->Line x ->Supplementary Services**
2. Enable MWI->Select **Enable**(Default Enable)
3. MWI subscription enable->select **Enable**
4. Click **Save & Apply** the save operation

Supplementary Services

Call Waiting	Enable ▾	Hotline	
Enable MWI	Enable ▾	Voice Mailbox Numbers	*2
MWI Subscribe Enable	Enable ▾	Voice Mail Display	Disable ▾
MWI Subscription Period(Seconds)	3600	Outgoing Call Active Password	
Outgoing Call Block Password		Feature Key Synchronization	Disable ▾
Emergency Call Num			
Transfer on Conference Hang up	Disable ▾		

4.3 Text Message

The phone supports the functions of newly sending text messages, viewing sent text messages, receiving and viewing read/unread text messages, saving sent failed text messages, deleting text messages, etc. The main contents include the following.

- New Message
- Inbox
- Sentbox

- Outbox
- Draftbox

When a new text message is received, the power indicator flashes red slowly, the LCD interface indicates "n New text messages", and the voice message icon  is displayed in the status bar of the main interface.



Description: After exiting the text message prompt window, the unread prompt window will not pop up again until there is a new text message, or an account with an unread text message after re-registration.

New Message

Procedure

1. Press **Menu**->**Message**->**Text Message**->**New Message**
2. Enter the text message content, and the text message cannot be empty



3. When finished, Press **Send** soft key, press the  or  key to switch the sender account, and then press the  or  key to fill in the recipient account.
4. After filling in the message, press the **Send** soft button, and if "**Sending Message...**" is prompted, it means the message has been sent to the recipient, if "**Fail to send**" is prompted, it means the recipient does not exist or other errors, the text message will be saved in the **Outbox** and can be changed and resend.

Viewing text messages


To view received messages.

Procedure

1. Press **Menu**->**Message**->**Text Message**->**Inbox**
2. You can select one message and press the **View** to view the content of this message.



When viewing a text message, you can press the **Reply** to reply to the message directly; you can also press the **Delete** key to delete the message, or press **Option** in the received list to select **Delete** or **Delete All**.

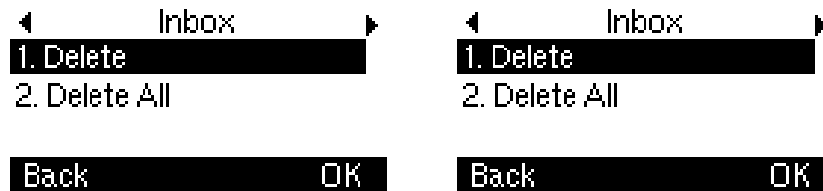


To view sent messages:

Procedure

1. Press **Menu->Message->Text Message->Sentbox**



2. You can select one message and press the **View** to view the content of this message.

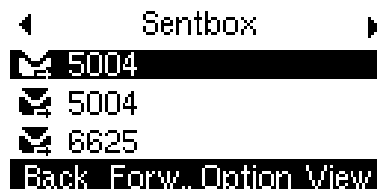


When viewing a text message, you can press **Forward** to transfer the message to another account; you can also press the **Delete** to delete the message, or press the **Option** in the Sentbox message list to select **Delete** or **Delete All**.

Save Text message


Save to outbox: When sending a text message, it will be automatically saved to the **outbox** after sending failure.

Procedure

1. Press **Menu->Message->Text Message->Outbox**.

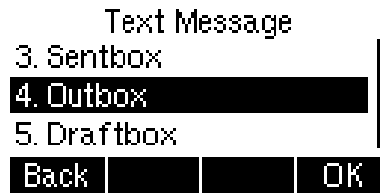

2. Display the list of failed messages, you can one message, press the View to view the message content

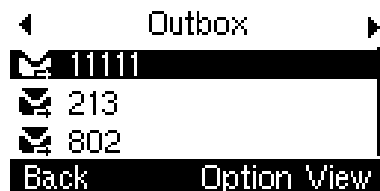


When viewing a text message, you can press **Forward** to transfer the message to another account; you can also press the **Delete** to delete the message, or press the **Option** in the Sentbox message list to select **Delete** or **Delete All**.

Save to Draftbox: When sending a message, if it is not sent out and you quit editing the message, it will be automatically saved to the draftbox

Procedure

1. Press **Menu->Message->Text Message->Draftbox**

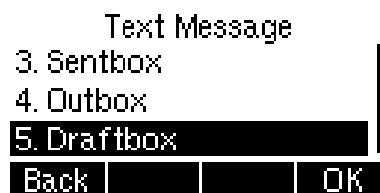

Display the list of unsent messages, select one message, and press **Send** to send the text message directly



Press **View** to view the text message; or press the **Option** to **Delete** or **Delete all**

4.4 Directory

The phone provides several types of phone directories, which can be customized by your system administrator.

Topics

[Local Contacts](#)

[Blacklist](#)

Local Contacts

You can store up to 2000 contacts in your local directory, you can search, add, edit and delete a contact.

Topics

[Managing the Local Directory Groups](#)

[Managing the Local Directory Contacts](#)

[Moving a Local Directory Contact to Blacklist](#)

[Searching for Contacts](#)

Managing the Local Directory Groups

You can manage the Local Directory groups when the phone is idle.

Topics

[Adding Contact Groups](#)

[Editing Contact Groups](#)

[Deleting Contact Groups](#)

Adding Contact Groups

To organize your contacts and make them easier to find, you can add additional groups in the Local Directory.

Procedure

1. Select **Directory** or navigate to **Menu > Directory > Local Contacts**.
2. Select **AddGrp**.
3. Enter the desired group name and select **Ring Type**.
4. Select **Save**.

Editing Contact Groups

You can change or add the group's information.

Procedure

1. Select **Directory** or navigate to **Menu > Directory > Local Contacts**.
2. Select the desired group.
3. Select **Option > Detail**.
4. Edit the group information.
5. Select **Save**.

Deleting Contact Groups

When you delete a contact group, the contacts in the group will not be deleted. You can view the contacts in **All Contacts** list.

Procedure

1. Select **Directory** or navigate to **Menu > Directory > Local Contacts**.
2. Select the desired group.
3. Select **Option > Delete**.

The phone prompts you whether to delete the group.

4. Select **OK**.

Managing the Local Directory Contacts

You can manage the Local Directory contacts when the phone is idle.

Topics

[Adding Contacts](#)

[Viewing Contacts](#)

[Editing Contacts](#)

[Deleting a Contact](#)

[Deleting All Contacts](#)

Adding Contacts

When you add a contact to your Local Directory, you can choose how much information you want to enter for your contact. You are required to enter a contact name at least for each new contact.

Procedure

1. Select **Directory** or navigate to **Menu > Directory > Local Contacts**.
2. Select the desired contact group or **All Contacts**.
3. Select **Add**.
4. Enter your contact's information.
5. Select the desired account from the **Account** field.
6. Select **Save**.

Viewing Contacts

You can view the local contacts from the Local Directory on your phone.

Procedure

1. Select **Directory** or navigate to **Menu > Directory > Local Contacts**.
2. Select the desired contact group or **All Contacts**.

The contact names are displayed in alphabetical order.

Editing Contacts

You can update your contacts' information.

Procedure

1. Select **Directory** or navigate to **Menu > Directory > Local Contacts**.
2. Select the desired contact group or **All Contacts**.
3. Select the desired contact, and select **Detail**.
4. Edit the contact information.
5. Select **Save**.

Deleting a Contact

You can delete any contact from the Local Directory.

Procedure

1. Select **Directory** or navigate to **Menu > Directory > Local Contacts**.
2. Select the desired contact group or **All Contacts**.
3. Click on the right side of the list-**more**, and select **Delete**.

Tip: The phone prompts you whether to delete the contact.

4. Select **OK**.

Deleting All Contacts

You can delete all contacts from the Local Directory.

Procedure

1. Select **Directory** or navigate to **Menu > Directory > Local Contacts**.
2. Select the desired contact group or **All Contacts**.
3. Select **Option > Delete All**.

The phone prompts you whether to delete all contacts.

4. Select **OK**.

Moving a Local Directory Contact to Blacklist

You can move a contact in the Local Directory to blacklist. Incoming calls from this contact will be rejected automatically.

Procedure

1. Select **Directory** or navigate to **Menu > Directory > Local Contacts**.
2. Select the desired contact group or **All Contacts**.
3. Select the desired contact, and select **Option > Add to Blacklist**.

The phone prompts you whether to move to the blacklist.

4. Select **OK**.

Searching for Contacts

In the Local Directory, you can enter search criteria to find your desired contact quickly.

Procedure

1. Select **Directory** or navigate to **Menu > Directory > Local Contacts**.
2. Select **Search**.
3. Enter your search criteria in the search field.

Blacklist

Incoming calls from the Blacklist are rejected automatically.

Topics

[Adding a Blacklist Contact](#)

[Viewing Blacklist Contacts](#)

[Editing a Blacklist Contact](#)

[Deleting Blacklist Contacts](#)

[Moving a Blacklist Contact to the Local Directory](#)

Adding a Blacklist Contact

You can add a blacklist contact on the phone to prevent someone from calling you.

Procedure

1. Navigate to **Menu > Directory > Blacklist**.
2. Select **Add**.
3. Enter the blacklist contact's information.
4. Select **Save**.

Viewing Blacklist Contacts

You can view the blacklist contacts from the Blacklist on your phone.

Procedure

1. Navigate to **Menu > Directory > Blacklist**.

Editing a Blacklist Contact

You can update your blacklist contacts' information.

Procedure

1. Navigate to **Menu > Directory > Blacklist**.
2. Select the desired blacklist contact, and select **Option > Detail**.
3. Edit the blacklist contact information.
4. Select **Save**.

Deleting Blacklist Contacts

You can delete one or all blacklist contacts. If a contact is removed from the blacklist, you can answer the call from the contact normally.

Topics

[Deleting a Blacklist Contact](#)

[Deleting All Blacklist Contacts](#)

Deleting a Blacklist Contact

If you want to answer a call from a specific contact, you need to remove it from the Blacklist.

Procedure

1. Navigate to **Menu > Directory > Blacklist**.
2. Select the desired blacklist contact.
3. Select **Option > Delete**.
The phone prompts you Delete selected item.
4. Select **OK**.

Deleting All Blacklist Contacts

You can delete all contacts from the Blacklist when you are ready to answer calls from them again.

Procedure

1. Navigate to **Menu > Directory > Blacklist**.
2. Select the desired blacklist contact, select **Option > Delete All**.
The phone prompts you whether to delete all contacts.
3. Select **OK**.

Moving a Blacklist Contact to the Local Directory

You can move a blacklist contact to a Local Directory. Incoming calls from this contact will not be rejected automatically.

Procedure

1. Navigate to **Menu > Directory > Blacklist**.
2. Select the desired contact, and then select **Add to Contact list**.
The phone prompts you whether to move to contact.
3. Select **OK**.

4.5 Remote Phone Book

The remote phone book is a centrally maintained phone book, stored on the remote server. Users only need the access URL of the remote phone book. The IP phone can establish a connection with the remote server and download the phone book, and then display the remote phone book entries on the phone.

Topics

[Remote phonebook updated to local \(xml\)](#)


[Remote Phonebook](#)

Remote phonebook updated to local (xml)


Remote Phone book is to download all the server's Phonebook(xml) to the phone Local Contacts, you can see the complete organization structure and contact information.

Configure Remote phonebook (.xml) to Local Contacts via Web UI:


1. Go to the web interface and click **Phone -> Directory-> Remote Phonebook update to local (xml)**.
2. Fill in the **URL** (remote phonebook address), the detection interval is 3600s by default.
3. Click **Save**

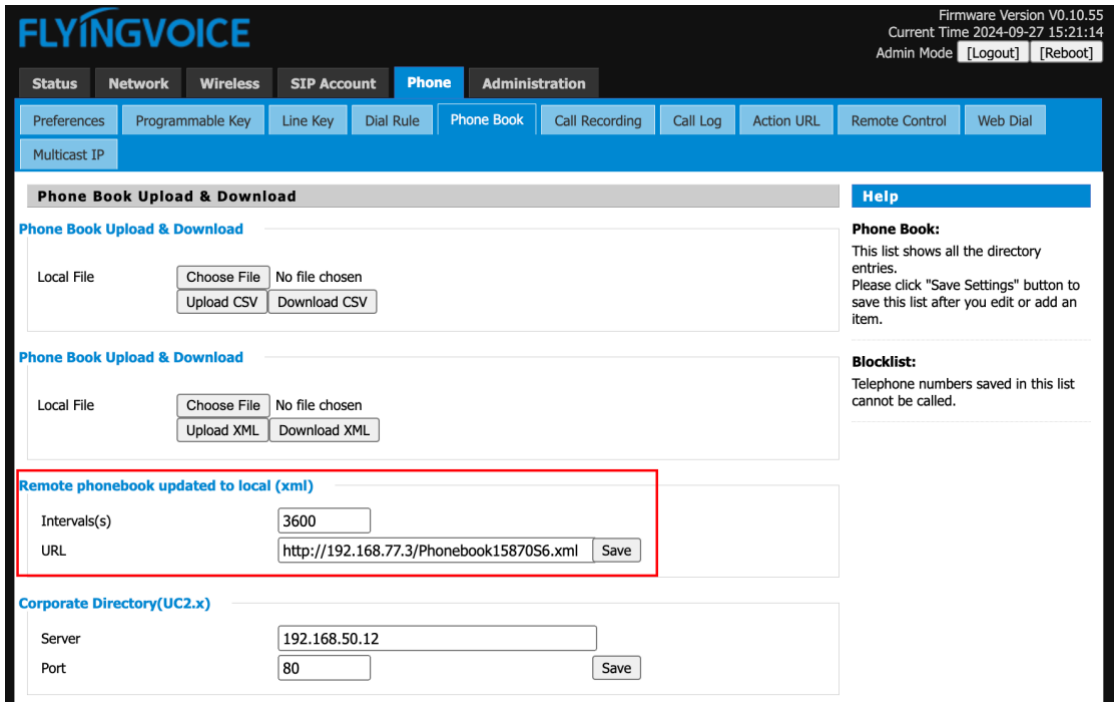

Example of xml file (http server):

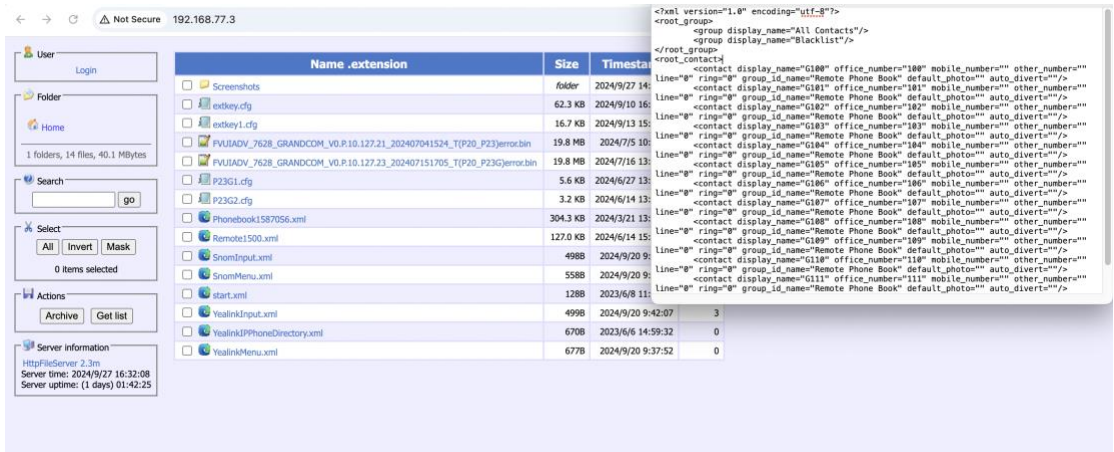


You can view the Phonebook (All Contacts) on the web:

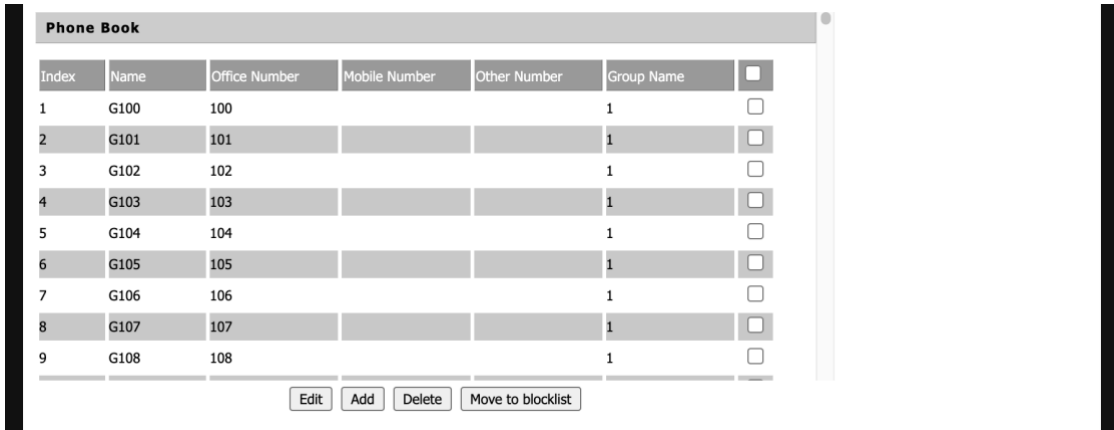

View Remote phonebook (All Contacts) through the phone screen:

1. Click **Menu->Directory->Local Contacts**, you can see the imported phonebook.
2. View the list of contacts in the phonebook

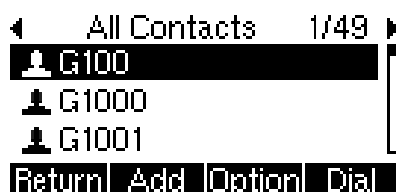

Remote Phonebook

You can access the Remote Phone Book remotely and see the complete organization contact information. you can configure up to 4 URLs.

Procedure

Configure the Remote Phone Book via the Web UI:


1. Go to the web UI and click **Phone -> Phonebook -> Remote Phonebook Download (xml)**
2. In URL, fill in the **URL** address and Phonebook name (directory name), optional Incoming/Outgoing Call Lookup
3. Click **Save**

TIPS: You can fill in more than one remote phonebook URL.

To view the remote phone book through the phone screen:

1. Click **Menu->Remote Phone Book->Remote Address Book** and select the imported remote group.
2. View the list of contacts in the **Remote Phone book**.

TIPS: You can Dial/Search/Add Contacts.

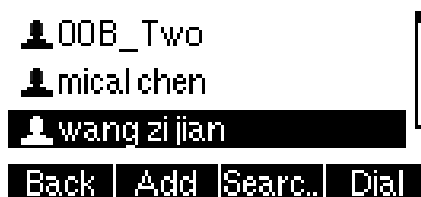

4.6 LDAP

LDAP stands for Lightweight Directory Access Protocol, which is a client-server protocol for accessing a directory service. LDAP directory feature of the Flyingvoice phone allows you to search for contacts.

Configure LDAP Address Book through the web interface:

1. Click **Phone** -> **Phonebook** -> **LDAP**, select **Enable** LDAP
2. Fill in the server address information of Corporate address book, as shown below.
3. Click **Save**.

Example (Labeling selection depends on the server):

Enable LDAP: Enable/Disble

LDAP Label: LDAP Phone Book (Display Name)

LDAP Name Filter: ((cn=%)(sn=%))

LDAP Number Filter: ((telephoneNumber=%)(homePhone=%)(mobile=%))

LDAP Server Address: 192.168.20.165

Port: 389

Base: dc=pbx,dc=com

User Name: cn=admin,dc=pbx,dc=com

Password: password

Max Hits (1~1000): 50

LDAP Name Attributes: cn sn displayName

LDAP Number Attributes: telephoneNumber homePhone mobile mail departmentNumber

LDAP Display Name: %cn

Protocol: Version 3


LDAP Lookup For Incoming Call: Enable

LDAP Lookup For Callout: Enable

LDAP Sorting Results: Enable

Add to Contact/Blocklist through LDAP Phone Book:

1. On the Phone UI, go to **Menu-> Directory**, select your **LDAP**.
2. Select a number, press **Option->Add to Contact/Blocklist**, you can view the **Detail** of a contact or **Dial**.

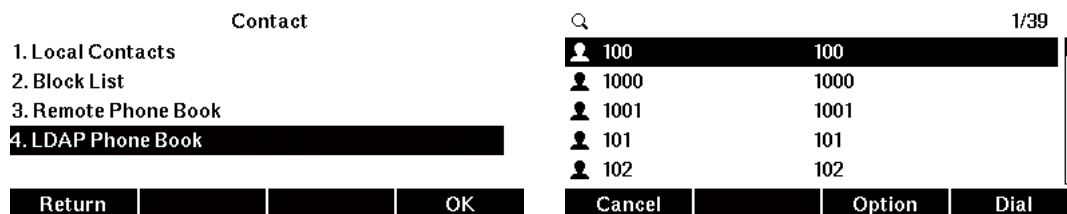**Search Contacts through LDAP Phone Book:**

1. On the Phone UI, go to **Menu-> Directory**, select your **LDAP**.
2. Enter the **keywords** for the contact and the screen will display the search results.

4.7 Call History

The call history list includes Missed Calls, Dailed Calls, Received Calls, and each list holds 60 entries.

Topics

[Viewing History Records](#)

[Saving a History Record to Local Directory](#)

[Saving a History Record to Blacklist](#)

[Deleting History Records](#)

Viewing History Records

The history record saves the call information such as the caller's name and number, local line and call duration.

Procedure

1. Press **History**.
2. Select the desired list.
3. Select the desired entry.
4. Select **Option > Detail**.

Saving a History Record to Local Directory

To identify someone's call the next time, you can save a history record to the Local Directory.

Procedure

1. Select **History**.
2. Select the desired list.

3. Select the desired entry, and select **Option > Add to Contacts**.
4. Edit the contact information.
5. Select **OK**.

Saving a History Record to Blacklist

You can prevent someone from calling you again by saving a history record to Blacklist.

Procedure

1. Select **History**.
2. Select the desired list.
3. Select the desired entry, and select **Option > Add to Blacklist**.
4. Edit the contact information.
5. Select **OK**.

Deleting History Records

You can delete one or all call records from the call history list.

Topics

[Deleting a Call Record](#)

[Deleting All Call Records](#)

Deleting a Call Record

You can delete any call record from the call history list.

Procedure

1. Press **History**.
2. Select the desired list.
3. Select the desired entry, and select **Delete**.

Deleting All Call Records

You can delete all call records from the call history list.

Procedure

1. Press **History**.
2. Select the desired list.
3. Select the desired entry, and select **Delete All**.
The phone prompts you whether to delete all the records.
4. Select **OK**.

4.8 Beeper

P2X series phones support HB01 wireless emergency button and PB01 USB Panic Button, the following is the function configuration introduction

Topic

HB01 Call Button

Pairing through the phone UI

1. On the Phone UI, Go to **Menu> Features> Beeper > Beeper pairing list**
2. Press **Search**, the phone will enter the pairing mode, and searching icon  will appear on the top.
3. Press the HB01 button that needs to be paired, the phone UI will show device ID, press Pair, and it will prompt "Pairing the Beeper", and phone UI will show the icon of successful connection .
4. If you want to pair more buttons, repeat **Step 3**.

TIPS: The search mode will be turned on for 60s, if no new device is connected, it will be turned off automatically after the time limit.

Configure SpeedDial through the phone UI

1. Long press **M1 Key** of the phone, enter the interface of Configuration.
2. Select **SpeedDial** type, select **Line**, type in SpeedDial Number.
3. Press **Save**.

TIPS: The corresponding physical phone key for this function is the M1 key.

PB01 USB Panic Button

Settings through the phone UI

1. On the Phone UI, Go to **Menu> Features>Beeper>Emergency button speed dial settings**
2. Enter the emergency speed dialing interface and select the mode of the USB button (Disabled, Silent, SpeedDial)
3. Select **Silent Mode** and fill in the **value** for the Emergency number.
4. Click **Save** Settings.

TIPS: When the mode is Disable, the USB switch will not take action when pressed; when the mode is Silent, there will be no sound during the whole process of dialing out and answering; when the mode is SpeedDial, it will be the normal speed dialing of the call.

Chapter 5 Customizing Your Phone

You can make your phone more personalized by customizing various settings.

Topics

[Basic Setting](#)

[Audio Settings](#)

[AP Mode](#)

5.1 Basic Setting

Topics

[Backlight](#)

[Language](#)

[Time & Date](#)

[Changing the Administrator Password](#)

[Call Immediately key](#)

[Phone lock](#)

Backlight

You can change the screen backlight and time in the following settings:

Display			
1. Backlight Time	15s	< >	
2. Active Level	5	< >	
3. Inactive Level	1	< >	
Return		Switch	Save

Backlight Time:

- **Always On:** Backlight is on permanently.
- **15s, 30s, 1min, 2min, 5min, 10min or 30min:** Backlight is changed when the phone is inactive after the designated time.

Active Level:

The current screen brightness level.

Inactive Level:

Brightness level in standby.

Procedure

1. Navigate to **Menu > Basic > Display > Backlight Time**
2. Select the desired time from the **Backlight** field.
3. Select **Save**.

Language

Your phone supports several languages that you can choose to use on the phone.

Contact your system administrator to find out exactly which languages are supported on your phone.

Procedure

1. Navigate to **Menu > Basic > Language**.
2. Select the desired language.
3. Select **OK**.

The phone language is changed to the selected one.

Time & Date

You can set the time and date manually. The time and date formats are also variable.

Topics

[Setting the Time and Date Manually](#)

[Changing the Time and Date Format](#)

Setting the Time and Date Manually

If your phone cannot obtain the time and date automatically, you can set it manually.

Procedure

1. Navigate to **Menu > Basic > Time & Date > General**.
2. Select the Manual from the General field.
3. Edit the date and time.
4. Select **OK**.

The time and date set on the phone will be changed accordingly.

Changing the Time and Date Format

You can set the phone to display the time in 12-hour format or 24-hour format.

Procedure

1. Navigate to **Menu > Basic > Time & Date > Time Format**.
2. Select the desired time format.
3. Select **OK**.

Changing the Administrator Password

By default, you need input administrator password to access the **Advanced** setting menu. The default password is "admin". For security reasons, you should change the default password as soon as possible.

Procedure

1. Navigate to **Menu > Advanced > Change Password**.
2. Select **Menu Password** Enter your old and new password information.
3. Select **OK**.

Call Immediately key

You can set the "*" key or the "#" key as the call Immediately key, the default is the "*" key

Setting via phone web

Procedure

1. **Phone-> Preferences-> Miscellaneous**
2. Select "#" or "*", click **save and apply**

Miscellaneous

Auto Answer All Phone Number	Disable	Auto Answer by Callinfo	Disable
Auto Answer Delay Time	0	Auto Answer Specify Phone Number	
Dial Time Out (IDT)	5	Call Immediately Key	#
Auto On-hook Mode	Enable	Preferred Audio Device	Enable
ICMP Ping	Enable	Enable Escaped Char	Disable
Backlight Time(seconds)	15	Phone Lock	Disable
Phone lock password (1-15 digits)		Phone lock timeout (s)	10
Hook Disable	Disable		
Call Display	Name+Number		
Voice Message Prompt Tone	Enable		

5.2 Audio Settings

You can change the basic audio settings on your phone.

Topics

[Adjusting the Volume](#)

[Setting the Ring Tone](#)

Adjusting the Volume

You can adjust the volume of the ringer, media, and the audio during a call.

Procedure

1. Press the **Volume** key to adjust the volume.

Setting the Ring Tone

You can set distinctive ring tones for groups or contacts in your Local Directory so that you can identify the caller when your phone rings.

The ring tones are used according to this priority: Contact ring tone>Group ring tone>Account ring tone >Phone ring tone.

Topics

[Setting a Ring Tone for the Phone](#)

[Setting a Ring Tone for a Group](#)

[Setting a Ring Tone for a Contact](#)

Setting a Ring Tone for the Phone

You can choose a ring tone for all incoming calls.

Procedure

1. Navigate to **Menu > Basic> Ring >Ring Type**.
2. Select the desired ring tone.

3. Select **OK**.

Setting a Ring Tone for a Group

You can select a unique ring tone for various groups in your Local Directory.

Tip: You can only set a ring tone for a group that is added manually.

Procedure

1. Select **Directory** or navigate to **Menu > Directory> Local Contacts**.
2. Select the desired group.
3. Select **Option > Detail**.
4. Select the desired ring tone from the **Ring Type** field.

If a specific ring tone is selected, this group uses the ring tone according to the priority: Contact ring tone>Group ring tone.

5. Select **Save**.

Setting a Ring Tone for a Contact

You can select a unique ring tone for various contacts in your Local Directory. This helps you quickly identify callers according to the ring tones.

Procedure

1. Select **Directory** or navigate to **Menu > Directory> Local Contacts**.
2. Select the desired contact group or **All Contacts**.
3. Choose the desired contact, and select **Option > Detail**.
4. Select the desired ring tone from the **Ring Type** field.
5. Select **Save**.

5.3 AP Mode

You can use the FLYINGVOICE Phone as an AP wireless access point, and you can use wireless devices (mobile wireless devices such as cell phones and computers) for network connection.

Enable AP Mode

AP mode, when turned on, shuts down the phone's connection to Wi-Fi.

Procedure

1. Press the **Menu->Advanced->Network->AP**
2. Select AP **ON**, enter the SSID and Password, select **Security** and **Encryption Mode**
3. Press **Save**
4. Phone UI will prompt "Turning on AP mode will turn off Wi-Fi. Do you want to reboot?", Press **OK**
5. Wait for the phone to restart, you can find the AP access point in your Wi-Fi list.

Configure the AP Mode via the web interface:

1. Enter the phone's web interface, navigate to **Wireless -> Wireless Hotspot**.
2. Select **AP Switch** - select **Enable**.

3. The device will generate a default wireless network name (SSID). Enter the wireless hotspot password.

4. Click Save. The phone's AP mode will take effect after restarting.

TIPS: If the security mode is set to None, there is no need to enter a wireless hotspot password, and the Wi-Fi will be an open network.

AP Switch	on
Multiple SSID	P22P_542D7F
broadcast (SSID)	☒ Enable ☐ Disable
Security Mode	WPA2-PSK
WPA Algorithms	☐ TKIP ☒ AES ☐ TKIPAES
Pass Phrase	12345678
Frequency (Channel)	Auto
Operating Mode	☒ Mixed Mode ☐ Green Field
Channel BandWidth	☒ 20 ☐ 20/40

Chapter 6 Maintaining Your Phone

When your phone is unable to operate properly, you need to investigate or troubleshoot issues along with other tasks your system administrator may ask you to perform.

Topics

[Rebooting Your Phone](#)

[Resetting to Factory Settings](#)

6.1 Rebooting Your Phone

The improper operation may cause malfunction. If the malfunction occurs, your system administrator may ask you to reboot your phone.

Procedure

1. Navigate to **Menu > Basic > Reboot**.

The phone prompts you whether to reboot the phone.

2. Select **OK**.

Tip: You can also long press the Cancel key on the keypad when the phone is idle to reboot the phone.

6.2 Resetting to Factory Settings

When some issues occur on your phone and you have tried all troubleshooting suggestions but still do not solve the problem, you can reset your phone to factory configurations.

This operation will delete all your personal configuration settings, and reset all settings to the factory defaults. Check with your system administrator if the personalized settings are kept before resetting your phone to factory settings.

Procedure

1. Navigate to **Menu > Advanced** (default password: admin) > **Reset to Factory Settings**.

2. Select **Reset to Factory Settings**.

The phone prompts you whether to reset the setting.

3. Select **OK**.

The phone begins resetting.

Tip: Reset of your phone may take a few minutes. Do not power off until the phone has started up successfully.